

Blades Tow Right RC-MINI Wireless Light Bar

1. Plug the transmitter into your vehicles 4 pin or 7 pin connector
2. Turn on the power switch. The red LED on the switch will illuminate when it is on.
3. The tail lights will only light when the tail lights in the towing vehicle are turned on. The same for stop and turn signals. This will dramatically increase the battery life between charges.

You cannot overcharge the battery in the light bar, so keep the bar on the charger when not in use. The batteries will resist developing a memory so you do not have to discharge them all the way. However, they must be charged on a regular basis to prevent them discharging to a very low voltage level.

If you have further questions, please call 734-449-0518.

The transmitter and receiver are serialized together and will only work with another transmitter or bar that are programmed with the same serial number. If you own more than 1 of the Blades Tow Right wireless light bars, make sure to keep the transmitter and light bar sets together.

If either the transmitter or light bar is lost or stolen, no other transmitter or light bar will work with the existing equipment. Only the company or person who purchased the light bar originally can order a replacement transmitter or light bar.

Please make sure to register your product. In the case of a lost or stolen transmitter or light bar, the information is needed to verify proper ownership and to replace the missing part.

Your 4 way truck socket should be wired as pictured below:

