

Blades Tow Right Inc Utility Bar Guide to Operations

1. Plug the transmitter into your trucks 4 or 7 pin connector.
2. In the daytime simply turn on the remote control lights by flipping the switch on. The Taillights will be illuminated and the lights are ready to receive a signal from the truck.
3. To properly wire the battery charger, connect the yellow wire to a continuous 12 Volt power source (an inline 15 amp fuse is recommended). Connect the black wire to a good clean ground source.

Please remember that you cannot overcharge your lights so keep the bar on the charger when not in use. The batteries will resist developing a memory so you do not have to discharge them all the way.

If you have any issues recharging the battery, plug the cigarette lighter adapter into the vehicle, but not into the light bars. If the LED on the cigarette lighter adapter is not lit, the fuse is most likely blown. Replace the fuse with a 5 amp fuse.

Towmate provide a lifetime warranty on the electronics. (Except for water damage or other physical damage) Shipping is not included in the warranty. Call the 800 number anytime you have a problem.

If you have further questions please call 800-205-3232

Thank you for becoming a Blades Tow Right Inc Customer.